





The courses of shingles are laid loose over this turned-up edge and overlap the sheet metal by > 80 mm. The courses are not nailed or stuck down around the sheet metal profile. To prevent water being sucked below shingles laid flat, the top corner of each asphalt shingle is cut off at an angle. Seal every shingle on the verge flashing with bituminous mastic Shingle/Plastal Stick.



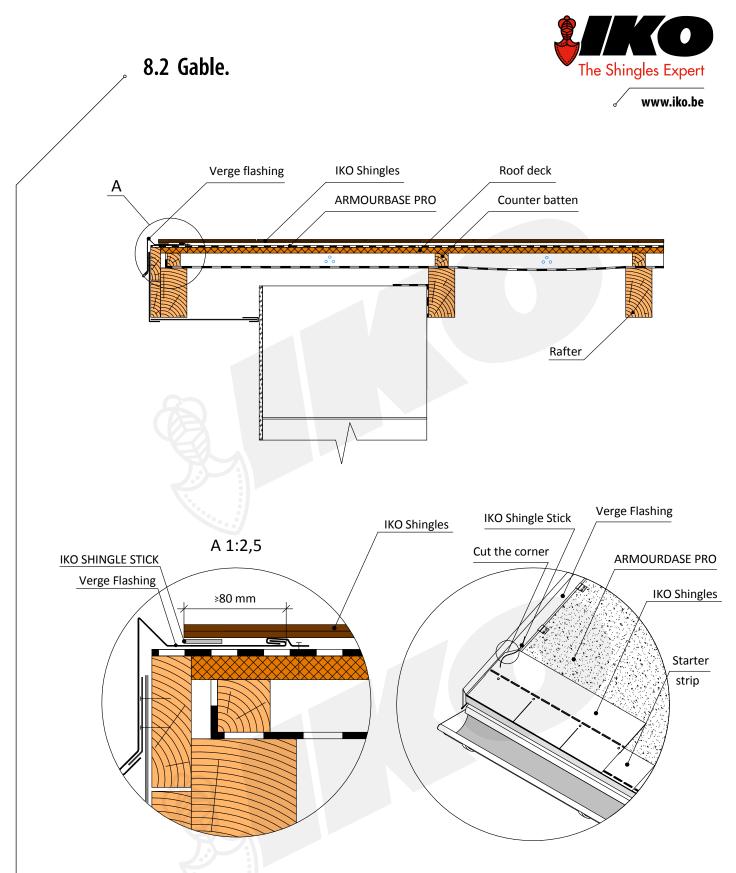



The courses of shingles are laid loose over this turned-up edge and overlap the sheet metal by \ge 80 mm. The courses are not nailed or stuck down around the sheet metal profile. To prevent water being sucked below shingles laid flat, the top corner of each asphalt shingle is cut off at an angle. Seal every shingle on the verge flashing with bituminous mastic Shingle/Plastal Stick.



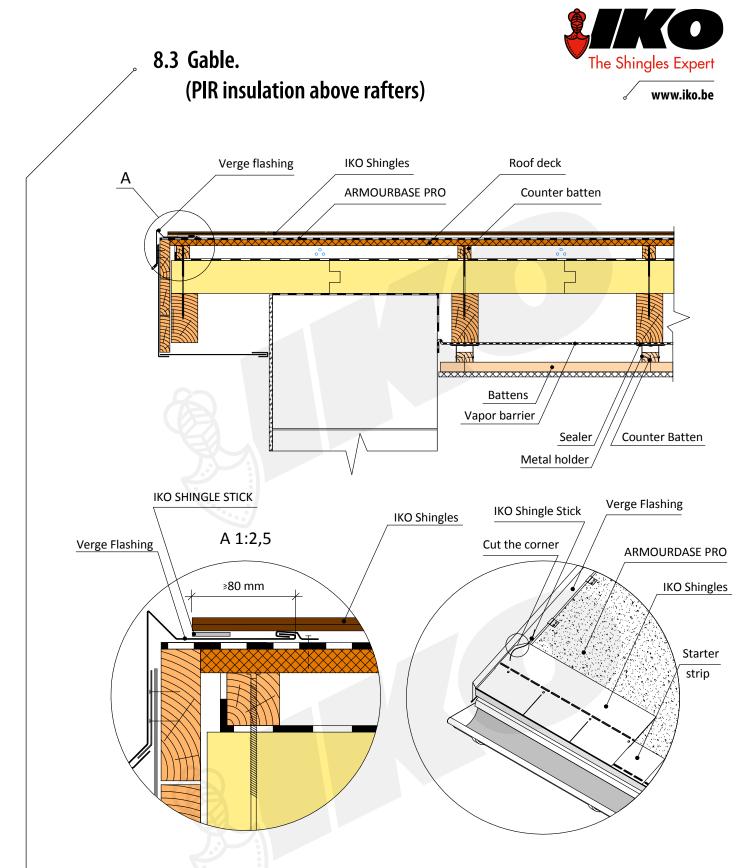

The courses of shingles are laid loose over this turned-up edge and overlap the sheet metal by > 80 mm. The courses are not nailed or stuck down around the sheet metal profile. To prevent water being sucked below shingles laid flat, the top corner of each asphalt shingle is cut off at an angle. Seal every shingle on the verge flashing with bituminous mastic Shingle/Plastal Stick.



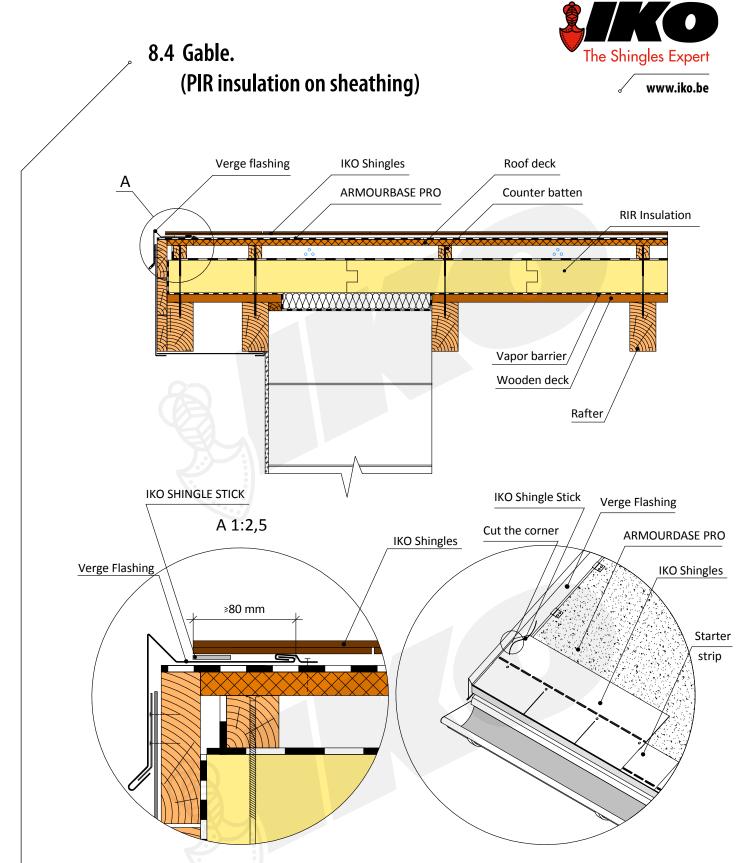

The courses of shingles are laid loose over this turned-up edge and overlap the sheet metal by \ge 80 mm. The courses are not nailed or stuck down around the sheet metal profile. To prevent water being sucked below shingles laid flat, the top corner of each asphalt shingle is cut off at an angle. Seal every shingle on the verge flashing with bituminous mastic Shingle/Plastal Stick.

